


LANC1 Navodila / User manual

Mikroprocesorski daljinski krmilnik za Digital8 in DV kamere

S51KQ P.O.Box 11, SI-3212 Vojnik
1999-Oct-27 <http://lea.hamradio.si/~s51kq>

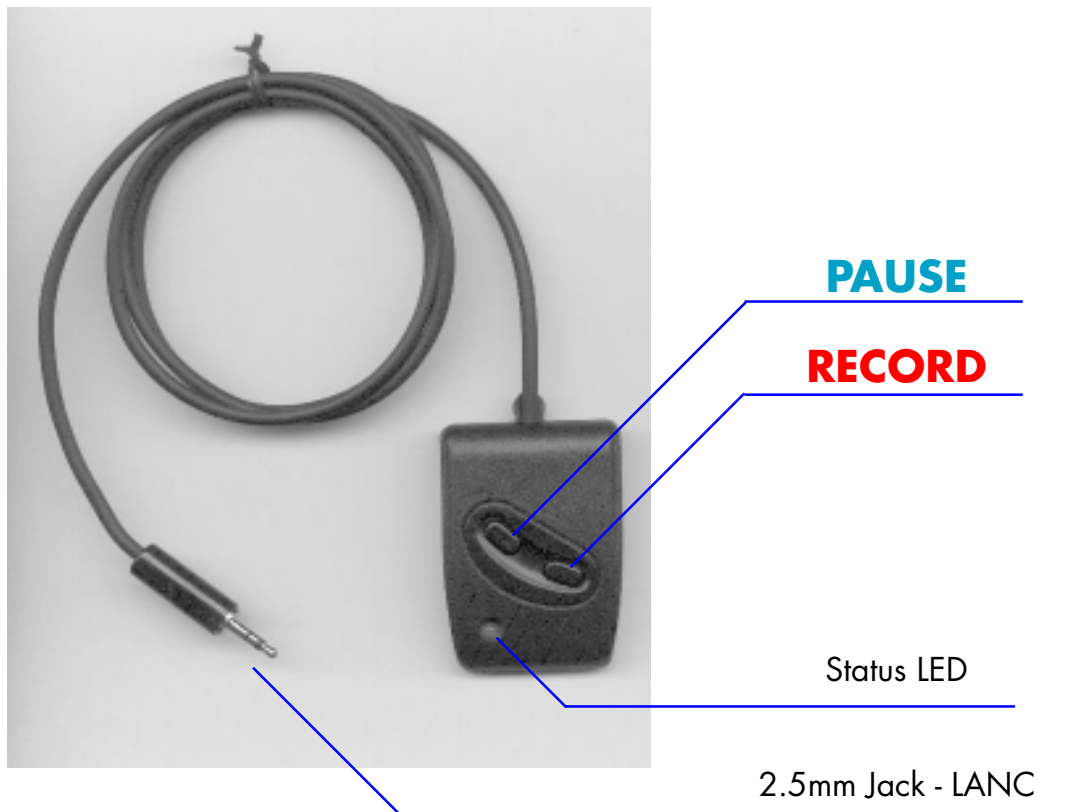

1. Daljinski upravljalnik smeš priključiti ali izključiti iz kamere le, ko je izključena!
2. Po vklopu kamere v režim videorekorderja (VTR mode) bo polovično gorela LED lučka.
3. Analogni AV signal pripelješ na AV-OUT priključka Digital8 kamere.
4. Sedaj je signal že viden na LCD monitorju kamere.
5. Pritisni **desno tipko RECORD na LANC1** za pričetek snemanja zunanjega AV signala.
6. Pritisni **levo tipko PAUSE na LANC1** za začasno ustavitev snemanja.
7. Pritisni **STOP tipko na kameri** za popolno ustavitev snemanja.

Vse ostale tipke na rekorderju kamere (VTR) delujejo med tem normalno. LANC1 daljinskega upravljalnika ni potrebno izključevati iz kamere v režimu rekorderja (VTR).
LANC1 se napaja preko kabla iz video kamere.

1. Remote controller can be connected/disconn. to/from camera only at POWER OFF state !
2. After camcorder is switched ON in to VTR mode, the Satus LED will shine at half intensity.
3. Analog AV source is connected to AV-OUT connectors of Digital8 camcorder.
4. Now the external AV source can be seen on camecorders LCD monitor.
5. Push once **right RECORD button on LANC1** to start Recording external AV source.
6. Push once **left PAUSE button on LANC1** to Pause Recording temporary.
7. Push once **STOP button on camcorder** to terminate Recording of external AV source.

All camcorder VTR buttons (Pause, Stop, Rewind, Play,..) are operational without disconnecting LANC1 remote controller. *LANC1 is powered via cable from camcorder.*